

# INSTALLATION AND SAFETY INSTRUCTIONS

## FOR YOUR SAFETY

**WARNING: BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF. EITHER THE FUSE REMOVED OR THE CIRCUIT BREAKER OFF .**

## GENERAL

You don't need special tools to install this fixture. Be sure to follow the steps in the order given. Under no circumstances should a fixture be hung on house electrical wires, nor should a swag type fixture be installed on a ceiling which contains a radiant type heating system. Read instructions carefully. **If you are unclear as to how to proceed, consult a qualified electrician.**

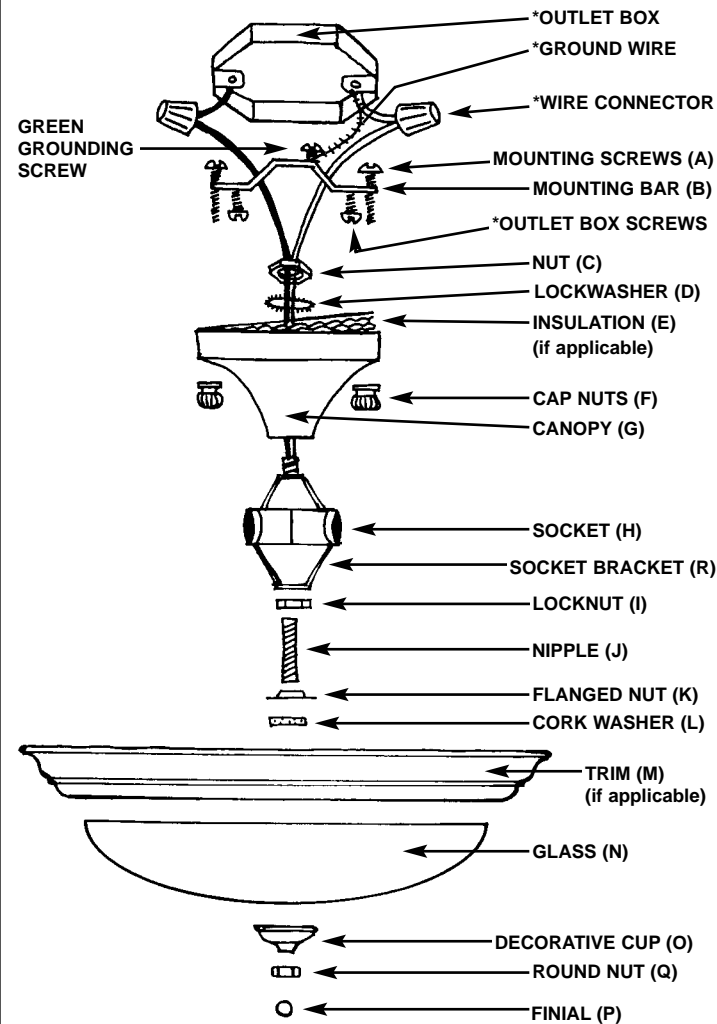


FIGURE 1

\*NOT SUPPLIED

## ASSEMBLY

Carefully remove the fixture from the carton and check that all parts are included, as shown in Figure 1 & 2. Be careful not to misplace any of the screws or parts which are needed to install this fixture.

## STEP 1:

Attach socket (H) to canopy (G). NOTE: Socket (H) may be factory installed. Pass wires through holes in canopy (G). Carefully lift up edges of insulation (E) (if applicable), slide lockwasher (D) and nut (C) down socket wire. Tighten nut (C) with pliers. CAUTION: Press insulation (E) (if applicable), back into place after socket (H) is installed.

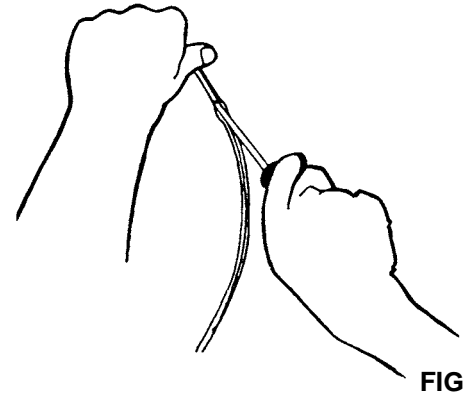


FIGURE 3

## GROUNDING AND MOUNTING BAR LOCK UP

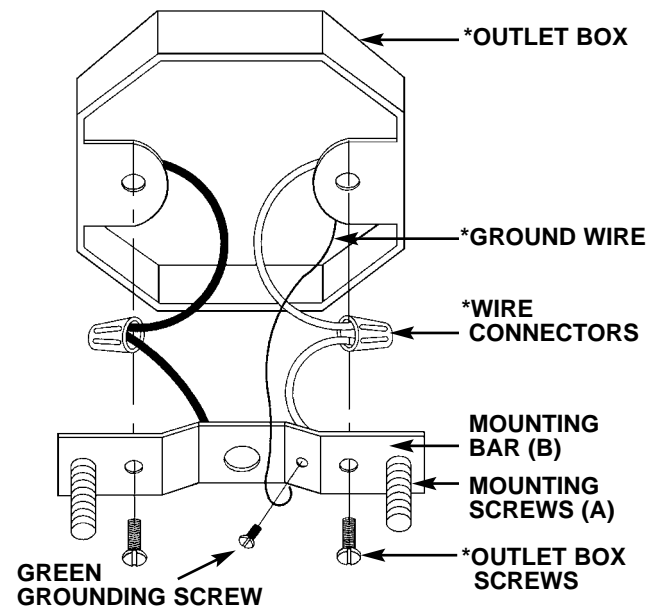


FIGURE 2



**Installation And Safety  
Instruction**

**HC-121**

**092800**

Fill In Item Number On Carton And  
File This Sheet For Fixture Reference. ITEM# \_\_\_\_\_

## INSTALLATION

HC-121

**IMPORTANT: DO NOT ATTACH FIXTURE DIRECTLY TO OUTLET BOX.**

### STEP 1:


Thread fixture mounting screws (A) into threaded holes of mounting bar (B). (SEE FIG. 2)

### STEP 2:

Secure mounting bar (B) to outlet box with outlet box screws (not supplied). Raised side is top as illustrated.

### STEP 3:

**A.** Take note of the color of the wire(s) on your fixture. Identify which group your fixture wire(s) falls into and connect the wires according to the directions below:

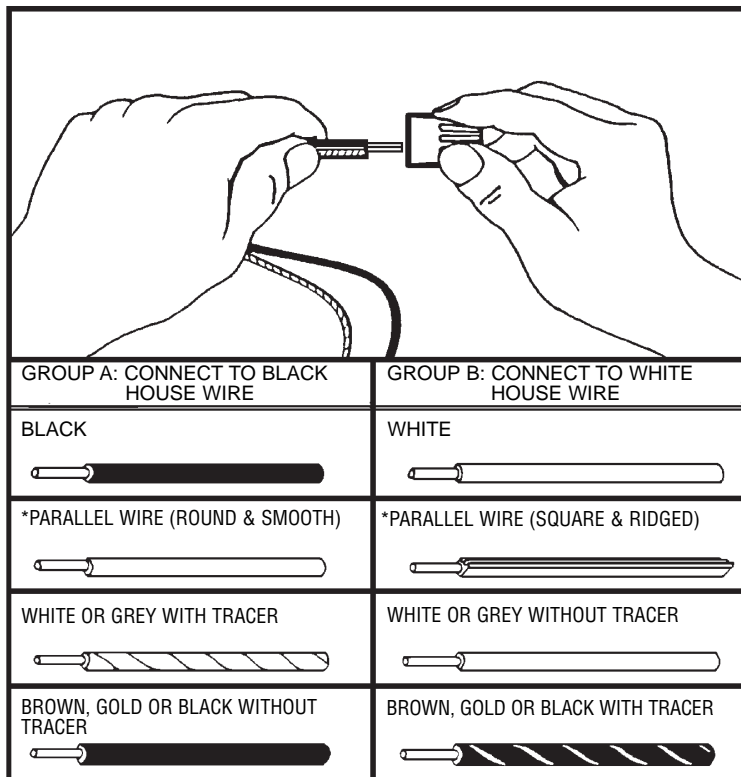

**\*NOTE:** When parallel wire is used, the tracer wire is square shaped or ridged, and the less tracer wire is round in shape or smooth. (Seen best when viewed from wire end.) To separate wires, grasp the ends of each wire and pull apart.

**B.** Take your fixture wire(s) from group A and place evenly against the black wire from the outlet box. **Do Not** twist wires together before using wire connectors.

**C.** Fit a wire connector (not supplied) over the wires and screw the connector clockwise until you feel a firmness.

**D.** Try gently to pull the connector off the wires. If you can pull the connector off, carefully re-do steps B and C, as above, and check again for a firm connection.

**E.** Connect the fixture wire from group B to the white wire from the outlet box in the same manner.

### STEP 4:

**GROUNDING INSTRUCTIONS:** The green grounding screw is to be inserted into the hole with two raised dimples provided on the mounting bar (B). Wrap the ground wire from the fixture (if supplied) and the ground wire from the outlet box (bare metal or green insulated wire) around the green grounding screw on the mounting bar (B) if uninsulated wire is on the mounting bar (B), connect the ground wire from the fixture (if supplied) and the outlet box to it using a small wire connector (not supplied).

**NOTE:** Underwriters Laboratories (U.L.) does not require all fixtures to have ground wires. These fixtures still meet all U.L. specifications. The listing mark of Underwriters on the product identifies products manufactured under its listing and Follow-Up Service Programs.

**NEVER CONNECT GROUND WIRE TO BLACK OR WHITE POWER SUPPLY WIRES.**

## FINAL ASSEMBLY

**Make sure no bare wires can be seen outside wire connectors.**

### STEP 1:

Make sure no bare wires can be seen outside wire connectors. After wires are connected, tuck them carefully inside outlet box. Raise the canopy (G) to the ceiling allowing for mounting screws (A) to protrude through holes in canopy (G). Secure in place with cap nuts (F).

**NOTE:** (If applicable) Carefully bend any decorative leaves that may interfere with securing cap nuts. Once the cap nuts have secured the canopy in place, carefully bend the decorative leaves back in their original position.

### STEP 2:

Install lamps.

### STEP 3:

Thread locknut (I) onto nipple (J) (about 3 turns) and thread that end of nipple (J) into socket (H). Tighten locknut (I) up to socket bracket (R).

### STEP 4:

Run flanged nut (K) (flat side down) up nipple (J) about a half inch. Next slide on cork washer (L). Position decorative ring (M) on glass (N) (if applicable). Raise glass (N) up so nipple (J) protrudes through center hole of glass (N).

### STEP 5:

Slide decorative cup (O) up nipple (J) (if applicable). Secure glass (N) in place with round nut (Q), and finial (P).

## FOR FIXTURES WHICH NEED TO HAVE BANDING APPLIED:

### STEP 1:

For ease of assembling, run screwdriver inside lip of band as illustrated in Figure 3. **NOTE:** May be factory installed.

### STEP 2:

Insert band of glass rim by pressing open channel onto rim of glass and continue to work your way around in one direct row, cut off excess band.

**NOTE:** If band is too hard and difficult to place on glass, run a blow dryer up and down band to soften it, then proceed with step 1 above.

## CLEANING

To clean, wipe fixture with a soft cloth. Clean glass with a mild soap. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.

## ORDERING PARTS

Keep this sheet for future reference, and in case you need to order replacement parts. All parts for this fixture can be ordered from place of purchase. Be sure to use exact wording from illustration when ordering parts.